

# HOW THE SEATBELT WARNING SYSTEM WORKS

## DRIVER DISPLAY SYSTEM



**UNBUCKLED PASSENGER COUNT DISPLAY** makes the driver aware of the count of passengers who are not buckled and where they are located within the vehicle.



**POSITIVE SYSTEM RESULT** shows all passengers are seated and buckled, the driver know knows he can begin the route.

## EXAMPLE CONFIGURATION

Seat layout with seatbelt dynamic pressure sensor and display units as indicated.

**×**  
INDICATES DISPLAY LOCATION ON LOWER DASH.

**\***  
INDICATES NODE LOCATION UNDER PASSENGER SEATS.



## HOW IT WORKS

PASSENGERS BUCKLE IN, DRIVER WARNED OF ANY ISSUES

VEHICLE MOVING. DRIVER AND PASSENGER ALERTED SHOULD ANY PASSENGER UNBUCKLE



PASSENGERS BOARD

DRIVER CHECKS ALL PASSENGERS ARE SECURE

PASSENGERS DELIVERED SAFELY